IP862G Enterprise IP Phone 1011/(





For getting your Voicemail:

- 1. Lift the Handset or alternatively press **Headset** or **Speaker** button
- 2. Press MWI/Voicemail key to get your voice mail

Tips:

- Voial the voicemail access code (*1 by default) or press the Voicemail Function Key. If your telephone forwards to a mailbox, you'll be logged in automatically. If not, you'll be asked for a mailbox and password.
- Alternatively, dial *2 to access the voicemail portal. Or call your telephone line from an outside telephone, such as a mobile phone.
- When you hear your voicemail greeting prompt, dial * and you will access the voicemail portal. Enter your mailbox and password, then follow the prompts to navigate the menus.
- Dial * to return to the main menu

Headset/EHS Support

- 1. If you are using a headset that is wired, press the headset button to make or answer calls.
- 2. If you are using a compatible wireless headset with the EHS cable you just need to press the button on the headset to make or answer a call.




Ring Type/Volume Selection

- 1. Press the **OK** navigation key, or the **Menu** soft key, to access the phone's menu
- 2. Select Basic, then Ring. Then select Ring Type or Ring Volume.



Function Codes

- * 67, followed by phone number : Hide Caller ID
- *72, followed by phone number: Set Call Forward
- *8, followed by phone number: Transfer to Voicemail
- * 68 : Play Last Caller ID
- * 73: Cancel Call Forward
- * 66 : Dial by Name Menu

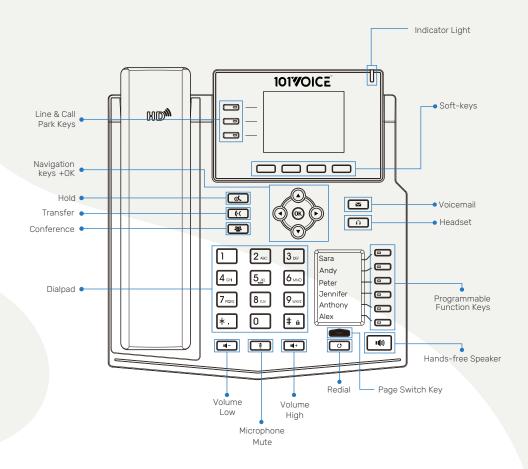



Key Function

OK Access phone's menu / select sub-menu.

Telephone Lines Select a line to make or answer a call, or place a call on hold.

When PFK is flashing, press to retrieve a call on hold.

Key Pad Use to dial a number, or enter a name.

Color LCD Screen Displays menu, date/time, phone number/name, call status and soft keys



Making Calls

1. Enter the phone number on telephone dialpad.

 Either pickup the handset, press the Headset button (if a headset's connected), press the Speaker button, or press the Dial softkey on the bottom of the LCD display.

3. To end the call, either hang up the handset, press End soft key, or press the Speaker button

Tips:

▼ No need to dial 9 to make external system calls (outside line).

No need to dial the Area Code if the destination number has the same Area Code as your phone's caller ID.

V No need to dial 1 before any phone numbers.

No need to place an existing call on hold to take another call. You can simply switch calls by pressing the phone line Function Keys.



Accepting Calls

 Either pick up the handset, press the **Headset** button (if a headset's connected), press the Speaker button, or press the **Answer** soft key on the LCD display.



Call Park/Orbit (System-Wide Hold)

(This function allows users to place an incoming call on system-wide hold, so the call can be retrieved from any phone within the location).

- 1. With the caller on the line, press the Call Park Function Key.
- 2. Wait for about (2) seconds to hear the "Call Park extension number" (i.e. 701 or 702).
- 3. Then press the **End** soft key or hang up the handset (you must do this for the call to be in Park mode).
- 4. The Parked call can be retrieved via any phone by dialing the "Call Park extension number" within (2.5) minutes.

Tips:

▼You should announce "You've got a call on 701" or "There's a call waiting for you on 702", etc.



Conference Calls - 3-Party Audio Conferencing

- While the 1st party is on the phone, press the Conf soft key at the bottom of the LCD display or Conference button.
- Display the 2nd party phone number (internal or external phone number), then press the Dial soft key.
- Press the Conf soft key again to join the conference, use Navigation Keys (up or down) to select the caller on-hold and press OK.
- 4. You my press the **End** soft key to end the conference, or **Split** to split the callers.



Transferring Calls – Announced/Attended Transfer

- While the 1st party is on the phone, press the Transfer button or XFER soft key, dial the number to transfer (internal or external), then press the Dial soft key.
- 2. Announce/notify the receiving party about the transfer.
- Press the XFER soft key to complete the transfer, or press End, then Resume to return to the 1st party.



Transferring Calls - Unannounced/Blind Transfer

 While the 1st party is on the phone, press the Transfer button or XFER soft key, dial the number to transfer to (internal or external), then press XFER again to complete the transfer.



Transferring Calls - Direct Voicemail Transfer

(This function allows users to transfer directly to an extension's voicemail without ringing the phone).

 Press the Transfer button or XFER soft key, dial *8 followed by the destination mailbox number, then press XFER again.



Bluetooth

- 1. Plug in the Bluetooth adaptor. Press the MENU softkey and go to BASIC > BLUETOOTH.
- Select ENABLED and press OK. Put your headset in pairing mode, then press the SCAN softkey. Once your headset is found, select it and press the CONNECT softkey.



Wi-Fi

- 1. Plug in the WiFi adaptor. Press the MENU softkey and go to BASIC > WLAN.
- Select ENABLED and press OK. Then press the SCAN softkey to search for available wireless networks.
- Select AVAILABLE NETWORK and press the ENTER softkey. Then select your wireless network, press CONNECT, and enter your password.